



Nikon Coolpix L820 LCD Replacement

This guide will show how to replace the LCD on the camera.

Written By: Lucas Otto



INTRODUCTION


This guide will show how to replace the LCD on the camera.




TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Settings Buttons

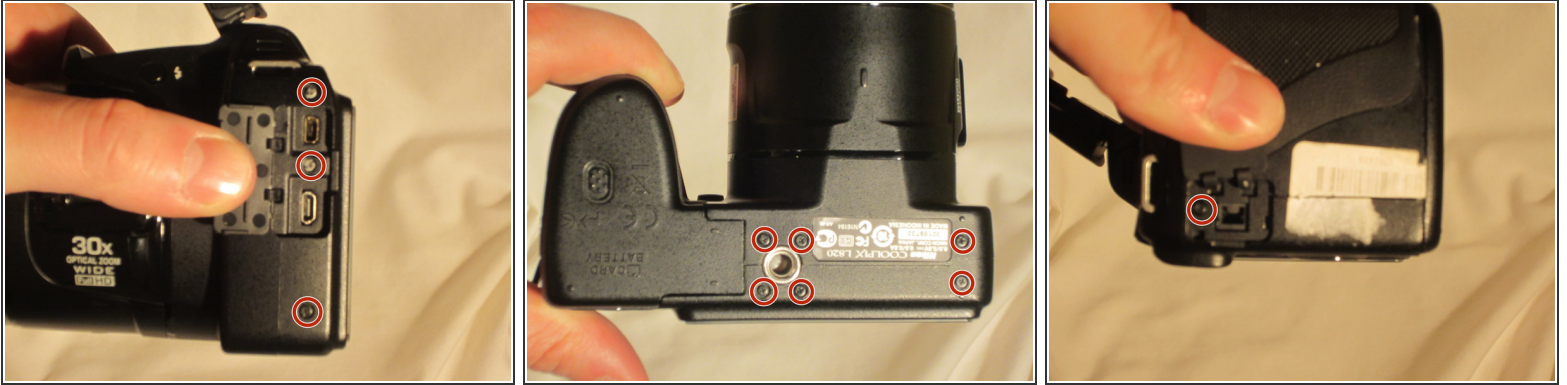

 Remove the battery.

- Begin by removing these ten screws, three on the left side, two on the bottom, and one on the right side of the camera. Use a Phillips size ##0 screwdriver to unscrew these screws. **Not sure of the exact size of the screws.**

Step 2




- Continue by removing the front top Phillip screw with the screwdriver.
- Opening the empty battery slot on the bottom of the camera, reveals four additional screws.
- Unscrew the four Phillips screws with the screwdriver.

Step 3



- Using the spudger, move around the casing, carefully separating the rear housing from the camera assembly.
- ⚠ Be sure to only apply pressure to the casing panels and not the sensitive internal electronics.
- Once the rear housing is separated, the settings buttons will be accessible for replacement.


Step 4 — LCD

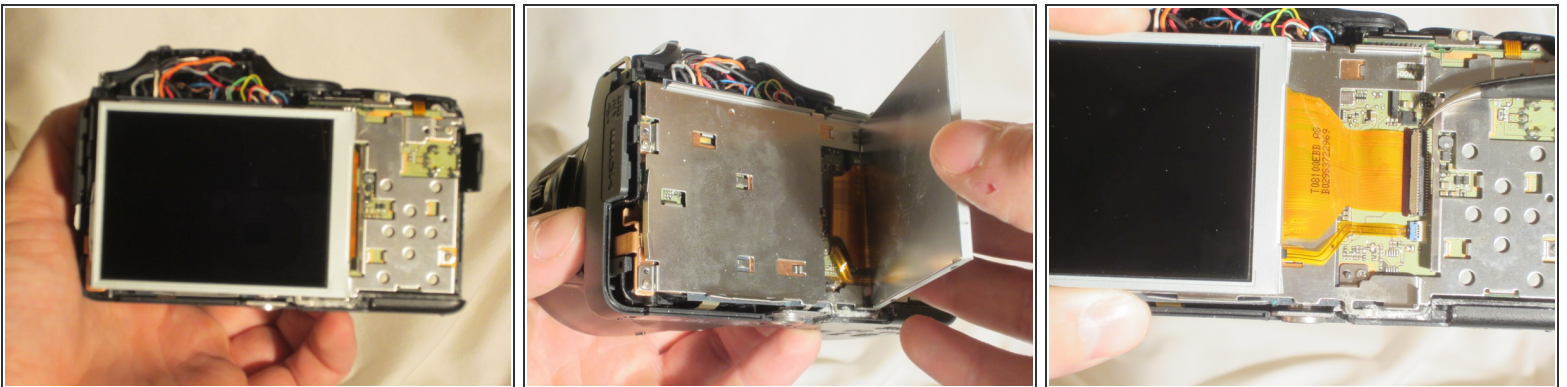

- To begin, the outside edges of the LCD should be exposed, with the back case panel removed.


⚠ Be careful not to damage the flexible ribbon wires now accessible.

Step 5

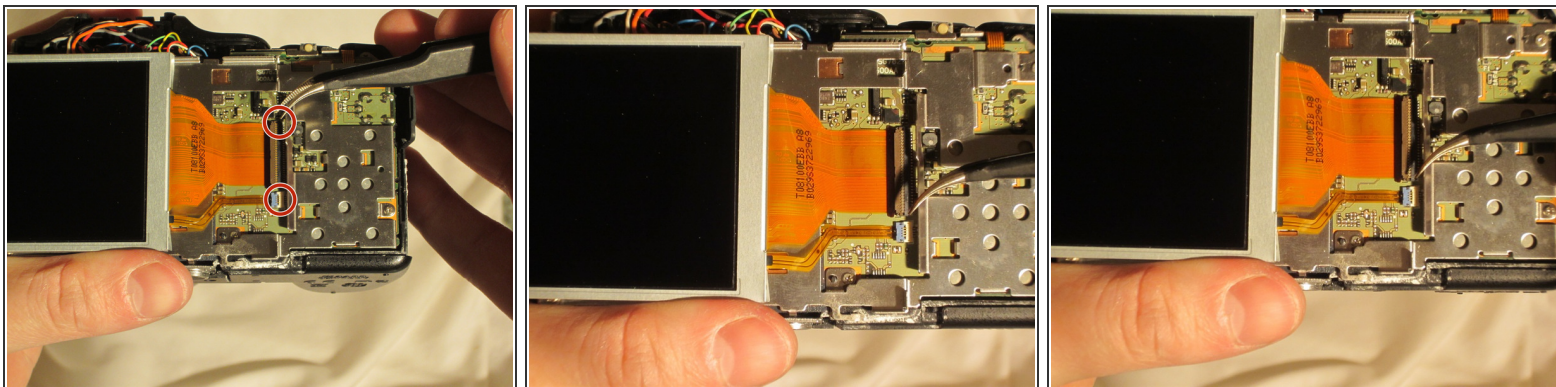

- Using the tweezers, carefully lift the hinges holding the two flexible ribbon wires in place.

Step 6

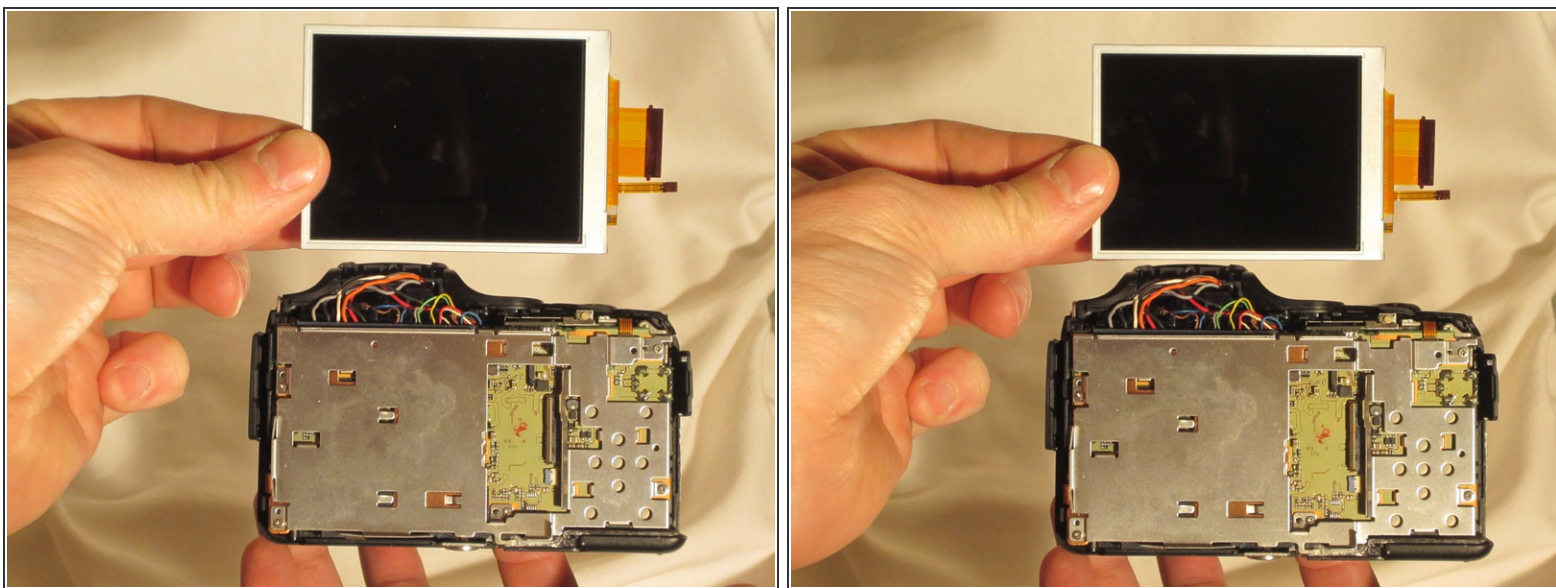

- Once the flexible ribbon wires are free, the LCD can be removed and replaced.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 09:07:50 PM.